Figure 1

## Syringe arrangement for drawing up the sample

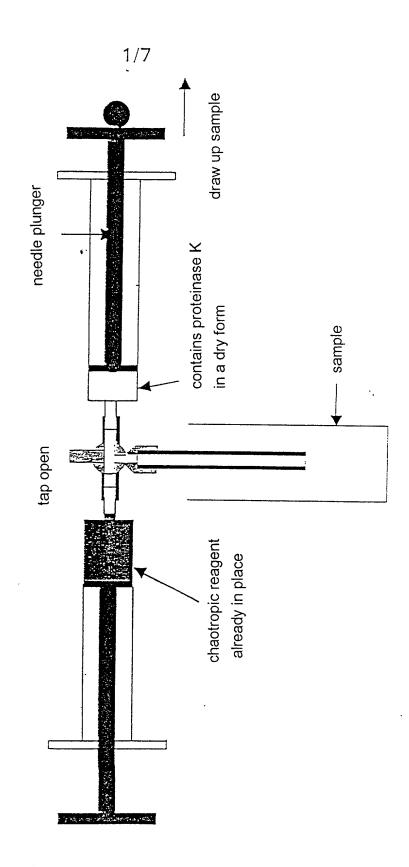


Figure 2

## 2/7 alternate operation of the plunger tap closed

Binding of NA to the inner wall of the capillary


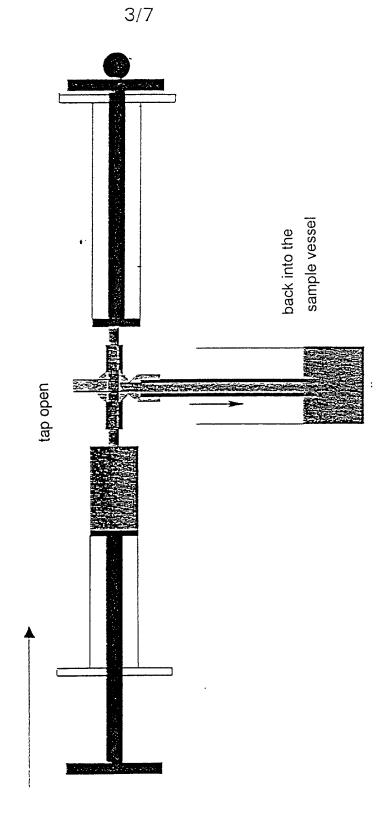


Figure 4

Washing by aspirating washing buffer once

## wasning by aspirating was Waschpuffer

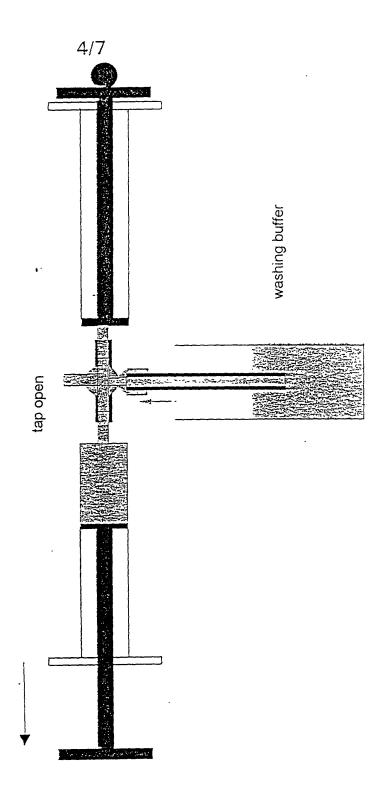

Drying by slowly aspirating air

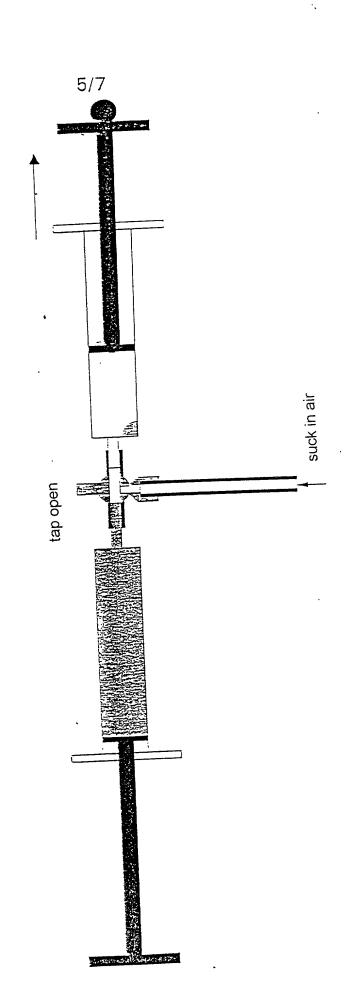


Figure 6

Uptake of master mix

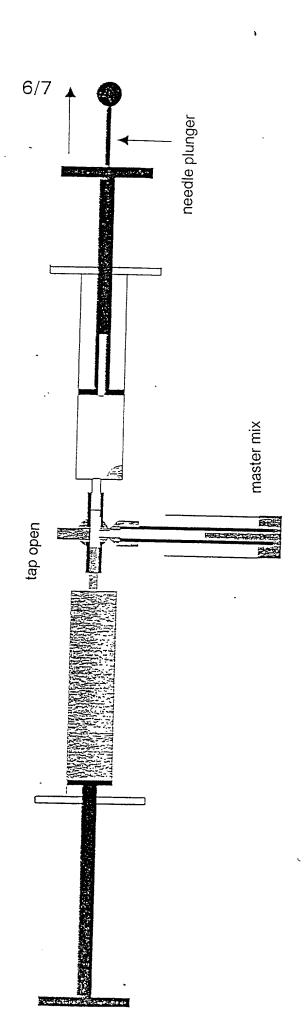


Figure 7

## Amplification and detection

